


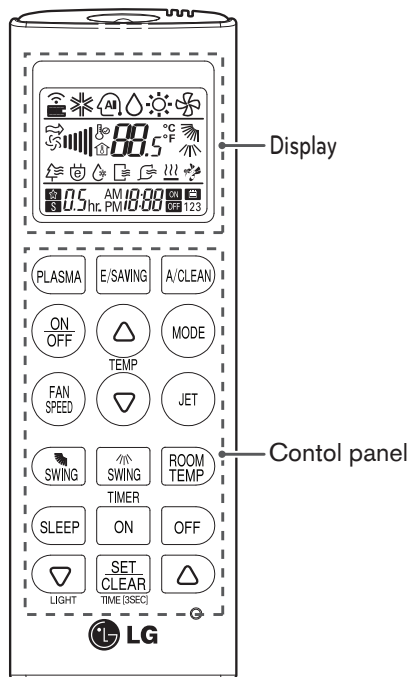






















Wireless Remote Controller



Control panel	Display	Description
		PLASMA Button (OPTIONAL) Used to start or stop the plasma-purification function.
		SLEEP TIMER Button Used to set the time of sleeping operation.
		ROOM TEMPERATURE SETTING Button Used to select the room temperature.
	-	ON/OFF Button Used to turn on/off the unit.
		Used to select fan speed in four steps low, medium, high and chaos.
		Used to select the operation mode. Cooling (★) / Automatic function or Automatic switching (A) / Dehumidification (∩) / Heating (☀) / Air Circulation (🌀)
		JET COOL Button: Speed cooling operates super high fan speed.
		Used to stop or start louver movement and set the desired up/down airflow direction.
		ROOM TEMPERATURE CHECKING: Used to check the room temperature.
		ON TIMER: starting operation. OFF TIMER: stopping operation.
		LEFT/RIGHT AIRFLOW Button Used to set the desired left/right (horizontal) airflow direction. (optional) UP/DOWN AIRFLOW Button Used to stop or start louver movement and set the desired up/down airflow direction.
	-	Used to set/clear the timer. Used to set the current time (if it input for 3sec.)
	-	Reset Button: to reset all settings of the remote controller.